

COSO®

G E R M A N Y

Original Operation Manual

Milk Frother



Intertek

Item no.: White 11660

Black: 11662

Red: 11664

Caso Germany

CASO International GmbH

Raiffeisenstraße 32

D-59757 Arnsberg

www.caso-germany.com

service@caso-germany.com

Representative USA

Frieling USA, Inc.

398 York Southern Road

Fort Mill, SC 29715

Tel.: 800.827.2582

Fax: 803.548.2060

www.frieling.com

sales@frieling.com

Document No.: 11660-11664 2014-07-22

© 2014 Braukmann GmbH

1	Operating Manual	5
1.1	Important Safeguards	5
1.2	General	5
1.3	Information on this manual	5
1.4	Warning notices	6
1.5	Limitation of liability	6
1.6	Copyright protection	7
2	Safety	7
2.1	Intended use	7
3	Commissioning	7
3.1	Safety information	7
3.2	Delivery scope and transport inspection	7
3.3	Disposal of the packaging	8
3.4	Setup	8
3.5	Electrical connection	8
3.6	Power cord	9
3.7	Rating plate	9
4	Design and Function	9
4.1	Overview	9
5	Operation and Handling	10
5.1	How to use	10
5.1.1	Settings	11
6	Cleaning and Maintenance	11
6.1	Safety information	12
6.2	Cleaning	12
7	Troubleshooting	12
8	Disposal of the Old Device	13
9	Guarantee	13
10	Technical Data	14
11	Bedienungsanleitung	16
11.1	Wichtige Schutzmaßnahmen	16
11.2	Allgemeines	16
11.3	Informationen zu dieser Anleitung	16
11.4	Warnhinweise	17
11.5	Haftungsbeschränkung	18
11.6	Urheberschutz	18
12	Sicherheit	18
12.1	Bestimmungsgemäße Verwendung	18
13	Inbetriebnahme	19
13.1	Sicherheitshinweise	19
13.2	Lieferumfang und Transportinspektion	19
13.3	Entsorgung der Verpackung	19
13.4	Anforderungen an den Aufstellort	19
13.5	Elektrischer Anschluss	20
13.6	Stromkabel	20

13.7	Typenschild.....	20
14	Aufbau und Funktion	21
14.1	Übersicht.....	21
15	Bedienung und Betrieb.....	21
15.1	Inbetriebnahme.....	21
15.1.1	Übersicht der Einstellungen.....	23
16	Reinigung und Pflege	23
16.1	Sicherheitshinweise.....	23
16.2	Reinigung.....	24
17	Störungsbehebung	24
18	Entsorgung des Altgerätes	25
19	Garantie.....	25
20	Technische Daten	26
21	Mode d'emploi.....	28
21.1	Consignes de sécurité importants.....	28
21.2	Généralités.....	28
21.3	Informations relatives à ce manuel	28
21.4	Avertissements de danger	29
21.5	Limite de responsabilités.....	30
21.6	Protection intellectuelle	30
22	Sécurité.....	30
22.1	Utilisation conforme aux dispositions	30
23	Mise en service.....	31
23.1	Recommandations de sécurité.....	31
23.2	Etendue de la fourniture et inspection de transport	31
23.3	Elimination des emballages	31
23.4	Exigences concernant le lieu d'installation de l'appareil.....	32
23.5	Raccordement électrique	32
23.6	Cordon d'alimentation.....	32
23.7	Plaque signalétique.....	32
24	Assemblage et fonctionnement.....	33
24.1	Aperçu.....	33
25	Commande et fonctionnement.....	33
25.1	Mise en service.....	33
25.1.1	Aperçu des réglages.....	35
26	Nettoyage et maintenance	35
26.1	Remarques importantes concernant la sécurité.....	35
26.2	Nettoyage.....	36
27	Dépannage.....	36
28	Elimination des appareils usés.....	37
29	Garantie.....	37
30	Caractéristiques techniques	38

1 Operating Manual

1.1 Important Safeguards

1. Read all instructions before using.
2. This appliance generates heat. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrocution do not immerse any part of the unit in liquid.
4. Children must be closely supervised when near the unit. Do not let children operate the unit without close supervision.
5. Unplug the unit when not in use and before cleaning. Allow unit to cool before cleaning.
6. Inspect the unit, its power cord and plug for any damage before using. If there appears to be any damage or if the unit shows signs of malfunctioning, do not use the appliance. Return the appliance to the nearest authorized service facility for inspection and repair.
7. Do not use accessory attachments that have not been recommended by the manufacturer.
8. Do not use outdoors.
9. Do not allow cord to touch hot surfaces or hang over sharp edges such as those on countertops.
10. To disconnect, turn any control to “off”, then remove plug from wall outlet.
11. Do not use appliance for other than intended use.
12. Household use only.
13. The lid must be closed when using milk frother.
14. Scalding may occur if the lid is removed during the brewing cycles.
15. SAVE THESE INSTRUCTIONS:

1.2 General

Thanks for using our Milk Frother. Before use, please read this manual carefully to correctly understand how to use the Milk Frother and fully use its superior properties. We believe that it will bring your family a convenient and comfortable life. Please keep properly this manual for reference when necessary. If there are any questions during use, please contact our after-sale service station or our company directly. We are always at your service. Thank you very much.

1.3 Information on this manual

These Operating Instructions are a component of the Milk Frother (referred to hereafter as the Device) and provide you with important information for the initial commissioning, safety, intended use and care of the device.

The Operating Instructions must be available at all times at the device. This Operating Manual must be read and applied by every person who is instructed to work with the device:

- Commissioning
- Operation
- Troubleshooting and/or
- Cleaning

Keep the Operating Manual in a safe place and pass it on to the subsequent owner along with the device.

1.4 Warning notices

The following warning notices are used in the Operating Manual concerned here.

**GEFAHR**

Danger

A warning notice of this level of danger indicates a potentially dangerous situation.

If the dangerous situation is not avoided, this can lead to death or serious injuries.

- ▶ Observe the instructions in this warning notice in order to avoid the danger of death or serious personal injuries.

**WARNUNG**

Warning

A warning notice of this level of danger indicates a possible dangerous situation.

If the dangerous situation is not avoided, this can lead to serious injuries.

- ▶ Observe the instructions in this warning notice in order to avoid the personal injuries.

**VORSICHT**

Attention

A warning notice of this level of danger indicates a possible dangerous situation.

If the dangerous situation is not avoided, this can lead to slight or moderate injuries.

- ▶ Observe the instructions in this warning notice in order to avoid the personal injuries.

**HINWEIS**

Please note

A notice of this kind indicates additional information, which will simplify the handling of the machine.

1.5 Limitation of liability

All the technical information, data and notices with regard to the installation, operation and care are completely up-to-date at the time of printing and are compiled to the best of our knowledge and belief, taking our past experience and findings into consideration.

No claims can be derived from the information provided, the illustrations or descriptions in this manual.

The manufacturer does not assume any liability for damages arising as a result of the following:

- Non-observance of the manual
- Uses for non-intended purposes
- Improper repairs
- Technical alterations
- Use of unauthorized spare parts

All translations are carried out to the best of our knowledge. We do not assume any liability for translation errors, not even if the translation was carried out by us or on our instructions. The original German text remains solely binding.

1.6 Copyright protection

This document is copyright protected.

Braukmann GmbH reserves all the rights, including those for photomechanical reproduction, duplication and distribution using special processes (e.g. data processing, data carriers, data networks), even partially.

Subject to content and technical changes.

2 Safety

This chapter provides you with important safety notices when handling the device.

The device corresponds with the required safety regulations. Improper use can result in personal or property damages.

2.1 Intended use

This device is only intended for use in households in enclosed spaces for

- Making milk foam and heating milk

Uses for a different purpose or for a purpose which exceeds this description are considered incompatible with the intended or designated use.

▲WARNING Warning

Danger due to unintended use!

Dangers can emanate from the device if it is used for an unintended use and/or a different kind of use.

- ▶ Use the device exclusively for its intended use.
- ▶ Observe the procedural methods described in this Operating Manual.

Claims of all kinds due to damages resulting from unintended uses are excluded.
The User bears the sole risk.

3 Commissioning

This chapter provides you with important safety notices during the initial commissioning of the device. Observe the following notices to avoid dangers and damages:

3.1 Safety information

▲WARNING Warning

Personal and property damages can occur during commissioning of the device!

Observe the following safety notices to avoid such dangers:

- ▶ Packaging materials may not be used for playing. There is a danger of suffocation.

3.2 Delivery scope and transport inspection

As a rule, the Milk Frother is delivered with the following components:


- Milk frother
- Whisk for frothing

- Operating Instructions

HINWEIS Please note

- ▶ Examine the shipment for its completeness and for any visible damages.
- ▶ Immediately notify the carrier, the insurance and the supplier about any incomplete shipment or damages as a result of inadequate packaging or due to transportation.

3.3 Disposal of the packaging

The packaging protects the device against damages during transit. The packaging materials are selected in accordance with environmentally compatible and recycling-related points of view and can therefore be recycled. 

Returning the packaging back to the material loop saves raw materials and reduces the quantities of accumulated waste. Take any packaging materials that are no longer required to “Green Dot” recycling collection points for disposal.

HINWEIS Please note

- ▶ If possible, keep the original packaging for the device for the duration of the guarantee period of the device, in order that the device can be re-packaged properly in the event of a guarantee claim.

3.4 Setup

To ensure a safe and error free operation of the Device the location should fulfill the following requirements:

- The device must be set up on a firm, flat, horizontal surface with sufficient load-bearing capacity.
- Choose the setup location in such way that children cannot reach the device.
- The device is not intended to be installed in a wall or a built-in cupboard.
- Do not set up the device in a hot, wet or extremely damp environment or near flammable material.
- The electrical socket must be easily accessible so that the power lead can be disconnected easily, in the case of an emergency.
- The installation and assembly of this device in non-stationary setup locations (e.g. on ships) must be carried out by specialist companies/electricians, provided they guarantee the prerequisites for the safe use of this device.

3.5 Electrical connection

In order to ensure the safe and trouble-free operation of the device, the following instructions must be observed for the electrical connection:

- Before connecting the device, compare the connection data (voltage and frequency) on the rating plate with those of your electrical network. This data must agree in order that no damages occur in the device. If in doubt, ask your qualified electrician.
- The electrical outlet must be protected by a 16A safety cut-out switch.
- The connection between the device and the electrical network may employ a 3 meter long (max.) extension cable with a cross-section of 1.5 mm². The use of multiple plugs or gangs is prohibited because of the danger of fire that is involved with this.

- Make sure that the power cable is undamaged and has not been installed under the milk frother or over hot or sharp surfaces.
- The electrical safety of the device is only guaranteed if the device is connected to a properly installed protective conductor system. Operations using an electrical outlet without a protective conductor are prohibited. If in doubt, have the house installation checked over by a qualified electrician. The manufacturer cannot be made responsible for damages that are caused by a missing or damaged protective conductor.

3.6 Power cord

A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

3.7 Rating plate

The rating plate with the connection and performance data can be found beneath the device.

4 Design and Function

This chapter provides you with important safety notices on the design and function of the device.

4.1 Overview



- 1 Lid
- 2 Whisk holder with magnetic whisk
- 3 Jug
- 4 Power button
- 5 Power Base

5 Operation and handling

This chapter provides you with important notices with regard to operating the device. Observe the following notices to avoid dangers and damages.

⚠️ WARNUNG Warning

- ▶ Do not let the Device unsupervised during operation to be able to react quickly in case of dangers.

5.1 How to use

HINWEIS Please note

- ▶ The appliance has a touch key that can only be switched on; it switches off automatically.
- ▶ To reduce the risk of injury, do not drape cord over the counter top or table top where it can be pulled by children or triple over unintentionally.

With the milk frother you can make cold as well as warm milk froth.



MIN: Fill milk at least up to that marking

MAX FROTH: Fill milk up to that maximum marking to make milk froth.

MAX MILK: When you want to heat milk but not froth it, you can fill milk up to that maximum marking.

HINWEIS Please note

- ▶ Please note the maximum froth markings. Please use for milk froth only the MAX FROTH marking. Otherwise so much foam will be made that the lid would lift and milk would overflow.

Warm milk froth

1. Please put the whisk for frothing into the lid holder.
2. Switch on the power button.
3. The power button lights red. This is the setting to make warm milk froth.
4. The appliance starts to make milk foam and stops automatically as soon as the foam is finished.

Cold milk froth

1. Please put the whisk for frothing into the lid holder.
2. Switch on the appliance. Press the power button for approximately 2 seconds.
3. The power button lights blue.
4. The appliance starts to make cold milk foam and stops automatically as soon as the foam is finished.

Heating milk

1. Please put the whisk for frothing into the whisk holder.
2. Press the power button twice.
3. The power button blinks red. This is the setting to heat up milk.
4. The whisk rotates with reduced speed in order to ensure even heat distribution and to prevent the milk from burning.

HINWEIS

Please note

- ▶ Please touch the power button with your finger in such a manner that you can still see the different settings.

5.1.1 Settings

Setting power button:	Milk:
Lights red	Making warm milk froth
Blinks red	Heating up milk
Lights blue	Making cold milk froth

HINWEIS

Please note

- ▶ Please pour out the milk and the milk froth. By using a metal spoon or another object with sharp edges you risk damaging the coating of the jug.
- ▶ Only fill milk into the appliance.

6 Cleaning and maintenance

This chapter provides you with important notices with regard to cleaning and maintaining the device. Please observe the notices to prevent damages due to cleaning the device incorrectly and to ensure trouble-free operation.

6.1 Safety information

▲VORSICHT

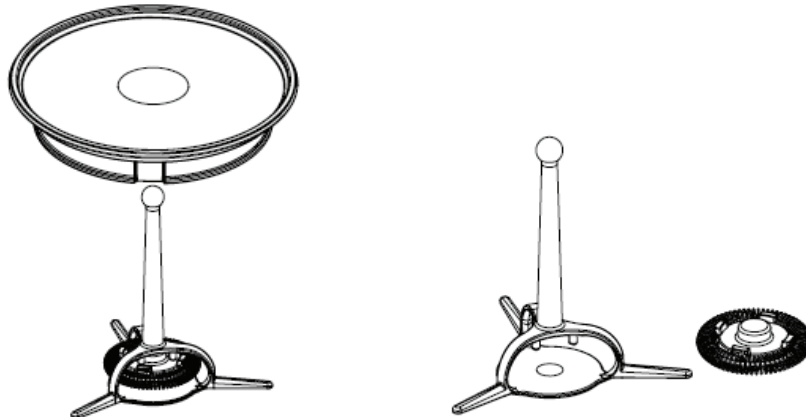
Attention

Please observe the following safety notices, before you commence with cleaning the device:

- ▶ Before cleaning, switch off the unit and take the power plug out of the outlet.
- ▶ Clean the appliances with a soft cloth.
- ▶ Don't clean the appliances with inflammable detergents.

▲VORSICHT Attention

- ▶ Clean the appliances again thoroughly when the machine hasn't been used for a long time.

6.2 Cleaning

1. Take off the lid and the whisk holder. You can remove the magnetic whisk from the side from its holder.
2. Clean the lid and the whisk as well as the jug of the milk frother with diluted detergent, with warm water and a soft sponge or a cloth.
3. Do not use any hard or sharp-edged objects or abrasive cleaning agents to clean the jug because the coating could be damaged.
4. Clean the lid and the whisk with lukewarm water. Rinse out the interior of the jug with lukewarm water.
5. Clean the outside of the appliance with a damp cloth.
6. Jug and base are not suitable for dish washer.
7. Never immerse the appliance in water or other liquids.

7 Troubleshooting

This chapter provides you with important notices with regard to operating the device. Observe the following notices to avoid dangers and damages.

▲VORSICHT Attention

- ▶ Repairs of electrical appliances must be carried out by qualified person who is trained by the manufacturer.
- ▶ Repairs performed by untrained persons may result in considerable hazards for the user and damage the machine.

Error	Possible cause	Solution
The appliance doesn't work.	Mains plug is not connected correctly.	Please check whether the main plug is connected correctly.
Electronical defect.		Please contact customer support.

VORSICHT**Attention**

- ▶ If you could not solve the problem by following the steps mentioned above, please contact the service center.

8 Disposal of the Old Device

Old electric and electronic devices frequently still contain valuable materials. However, they also contain damaging substances, which were necessary for their functionality and safety.

If these were put in the non-recyclable waste or were handled incorrectly, they could be detrimental to human health and the environment. Therefore, do not put your old device into the non-recyclable waste under any circumstances.

**HINWEIS****Please note**

- ▶ Utilise the collection point, established in your own town, to return and recycle old electric and electronic devices. If necessary, contact your town hall, local refuse collection service or your dealer for information.
- ▶ Ensure that your old device is stored safely away from children until it is taken away.

9 Guarantee

We provide a 12 month guarantee for this product, commencing from the date of sale, for faults which are attributable to production or material faults.

The guarantee does not include damages, which were incurred as a result of improper handling or use, as well as malfunctions which only have a minor effect on the function or the value of the device. Consumables, transit damages, inasmuch as we are not responsible for these, as well as damages, which were incurred as a result of any repairs that were not performed by us, are also excluded from the guarantee entitlements.

This device is designed for use in domestic situations and has the appropriate performance levels.

Any use in commercial situations is only covered under the guarantee to the extent that it would be comparable with the stresses of being used in a domestic situation. It is not intended for any additional, commercial use.

In the event of justified complaints, we will repair the faulty device at our discretion or replace it with a trouble-free device.

Any pending faults must be reported within 14 days of delivery.

All further claims are excluded.

To enforce a guarantee claim, please contact us prior to returning the device (always provide us with proof of purchase):

Frieling USA, Inc.
398 York Southern Road
Fort Mill, SC 29715
Tel.: 800.827.2582
Fax: 803.548.2060
www.frieling.com
service@frieling.com

10 Technical Data

Device	Milk Frother
Article no.	11660-11664
Net Weight	1.81 lbs (with base)
Rated Voltage	120 V
Rated Frequency	60 Hz
Motor Power	500 Watt